



ASPHALT PATCH

APPLICATION GUIDE

1150 Eighth Line Unit 16 Oakville, ON L6H 2R4
1-855-592-1049 | Support@ShopLiquidRubber.com

www.ShopLiquidRubber.com



PATCH YOUR POTHOLEs



Liquid Rubber Asphalt Patch is designed to provide a strong yet flexible fix. With its advanced formula, it creates a durable, smooth surface that stands up to wear and tear, keeping your roads and driveways safe and looking great.



Before



After

STEP 1: BEFORE YOU BEGIN

IDENTIFY YOUR SURFACE

The first step is to determine your surface and ensure compatibility. Liquid Rubber Asphalt Patch can be used on asphalt driveways, asphalt pathways, asphalt parking lots and asphalt roadways.

INSPECT YOUR ASPHALT

Improperly prepared surfaces can result in the reduction of the service life and performance of the membrane coating. Your surface should be free of dirt, water, and loose debris.

If you have any questions about compatibility, reach out to our Product & Application Support Team by phone 1-800-592-1049 or email Support@ShopLiquidRubber.com





PICK THE RIGHT PRODUCTS: GATHER YOUR MATERIALS

- Liquid Rubber Asphalt Patch
- Scraper or putty knife
- Small handheld garden shovel
- Tamper or hammer and board (like a 4 x 4)
- Disposable gloves

STEP 2: ONCE YOU HAVE YOUR SUPPLIES

WEATHER & WHEN TO APPLY

Liquid Rubber Asphalt Patch can be applied in all weather conditions and temperatures.

SET UP & CLEAN UP

Stay organized and limit clean up by following these setup tips:

1. Set out a tarp or large piece of cardboard to keep containers and tools on when not in use.
2. Make sure you have mineral oil/baby oil, rags, a scraper, and odorless mineral spirits on hand, so you are ready if a spillage occurs*
3. Clean skin immediately with mineral oil/baby oil
4. Spills on surfaces should be cleaned immediately with mineral spirits (sparingly) or baby oil to weaken surface

5. If the spillage dries, scrape it off with a razor/scraper/etc and use a wire brush to remove then clean with rags
6. Refer to the product Safety Data Sheet for personal protective equipment recommendations.

*Test inconspicuous area first to ensure no discoloration on surface
Warning: Mineral spirits can spread stain. Use sparingly



STEP 3: PREPARE THE AREA

PREPARATION & CLEANING

- Clean all loose asphalt (create as clean and strong an edge as possible), soils, vegetation and standing water from the crack. Scrubbed, rinsed and vacuumed out is best.



STEP 4: APPLY THE PATCH

HOW TO APPLY LIQUID RUBBER ASPHALT PATCH

Once the area is clean and dry you can begin your full field application for pitting, spalling, and small potholes over 12mm (½")

1. Loosen material in pail with a putty knife, garden shovel or other appropriate tool.
2. Fill pothole, crack or pitted area evenly and slightly proud (above) the surface (approximately 1/8" - 1/4" depending on the depth of the repair)
3. For potholes deeper than 2", allow 24 hours between each application depth of 2"
4. Use the putty knife, garden shovel, or other appropriate tool to scrape off excess material and expose the edges of the repair
5. Add additional material to fill low spots and re-tamp if necessary.
(Product may still be pliable but should be fairly solid after tamping)
6. Do not park on newly repaired potholes for 24-48 hours




HELPFUL TIPS

- Use disposable gloves
- Do not let unused material in the pail freeze
- Store above 10°C/50°F
- Reseal bag after use to extend shelf life up to 12 months
- For potholes deeper than 2", allow 24 hours between each application depth of 2"
- Can be applied in all temperatures and climates
- For cracks 1/8" - 1/4" use Liquid Rubber Asphalt Crack Filler
- If coating over with Liquid Rubber Driveway Restore, allow 24 hours before coating



11lb (5kg)
1 gallon pail

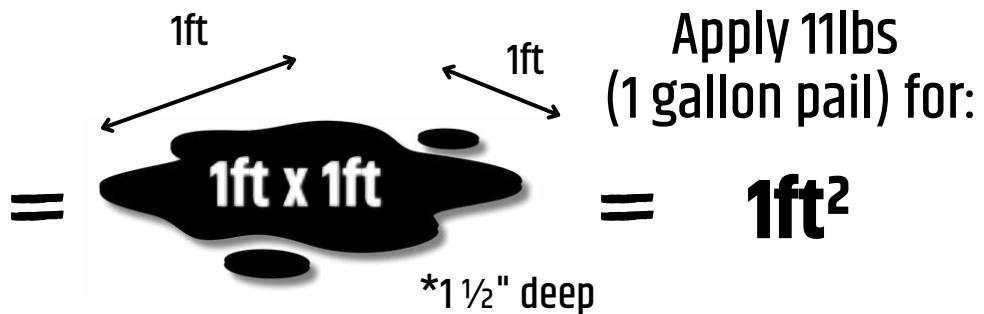

44LB (20KG)
4 gallon pail

