



**LIQUID RUBBER**

# ASPHALT PATCH

## APPLICATION GUIDE

### Time to Complete

**Application time:**

2-4 hours

**Cure time:**

48 hrs

### Difficulty

**Beginner**

### Products Needed

**1**

## TABLE OF CONTENTS

Before you begin	page 2	Application	page 4
Products & Supplies	page 3	Helpful Tips	page 4
Weather Considerations	page 3	Product Coverage	page 5
Cleaning & Prep	page 3		

1150 Eighth Line Unit 16 Oakville, ON L6H 2R4  
1-855-592-1049 | Support@ShopLiquidRubber.com

[www.ShopLiquidRubber.com](http://www.ShopLiquidRubber.com)



## PATCH YOUR POTHOLES

Liquid Rubber Asphalt Patch is designed to provide a strong yet flexible fix. With its advanced formula, it creates a durable, smooth surface that stands up to wear and tear, keeping your roads and driveways safe and looking great.



Before



After

### STEP 1: BEFORE YOU BEGIN IDENTIFY YOUR SURFACE

The first step is to determine your surface and ensure compatibility. Liquid Rubber Asphalt Patch is intended for use on asphalt surfaces.



### INSPECT YOUR ASPHALT

Improperly prepared surfaces can result in the reduction of the service life and performance of the membrane coating. Your surface should be free of dirt, water, and loose debris.

If you have any questions about compatibility, reach out to our Product & Application Support Team by phone 1-800-592-1049 or email [Support@ShopLiquidRubber.com](mailto:Support@ShopLiquidRubber.com)





## PICK THE RIGHT PRODUCTS: GATHER YOUR MATERIALS

- Liquid Rubber Asphalt Patch
- Scraper or putty knife
- Small handheld garden shovel
- Tamper or hammer and board (like a 4 x 4)
- Disposable gloves

## STEP 2: ONCE YOU HAVE YOUR SUPPLIES

### WEATHER & WHEN TO APPLY

**Liquid Rubber Asphalt Patch can be applied in all weather conditions and temperatures.**

### SET UP & CLEAN UP

Stay organized and limit clean up by following these setup tips:

1. Set out a tarp or large piece of cardboard to keep containers and tools on when not in use.
  2. Make sure you have mineral oil/baby oil, rags, a scraper, and odorless mineral spirits on hand, so you are ready if a spillage occurs.
  3. Spills on surfaces should be cleaned immediately with mineral spirits (sparingly) or baby oil to weaken surface
  4. *\*Test inconspicuous area first to ensure no discoloration on surface*
  5. If the spillage dries, scrape it off with a razor/scraper/etc and use a wire brush to remove then clean with rags
  6. Clean skin immediately with mineral oil/baby oil
  7. Refer to the product Safety Data Sheet for personal protective equipment recommendations.
- Warning: Mineral spirits can spread stain. Use sparingly*



### STEP 3: PREPARE THE AREA

#### PREPARATION & CLEANING

- Clean all loose asphalt (create as clean and strong an edge as possible), soils, vegetation and standing water from the crack. Scrubbed, rinsed and vacuumed out is best.



### STEP 4: APPLY THE PATCH

#### HOW TO APPLY LIQUID RUBBER ASPHALT PATCH

Once the area is clean and dry you can begin your full field application for pitting, spalling, and small potholes over 12mm (½")

1. Loosen material in pail with a putty knife, garden shovel or other appropriate tool.
2. Fill pothole, crack or pitted area evenly and slightly proud (above) the surface (*approximately 1/8" - 1/4" depending on the depth of the repair*)
3. Compact down firmly with tamper tool or equivalent until solid and level. (*example: block of wood & hammer*)
4. For potholes deeper than 2", allow 24 hours between each application depth of 2"
5. Use the putty knife, garden shovel, or other appropriate tool to scrape off excess material and expose the edges of the repair
6. Add additional material to fill low spots and re-tamp if necessary. (*Product may still be pliable but should be fairly solid after tamping*)
7. Do not park on newly repaired potholes for 24-48 hours



## HELPFUL TIPS

- Use disposable gloves
- Do not let unused material in the pail freeze
- Store above 50°F (10°C)
- Reseal bag after use to extend shelf life up to 12 months
- For potholes deeper than 2", allow 24 hours between each application depth of 2"
- For cracks ⅛" - ½" use Liquid Rubber Asphalt Crack Filler
- If coating over with Liquid Rubber Driveway Restore, allow 24 hours before coating




## PRODUCT COVERAGE

Use our Asphalt Driveway **Kit builder** to calculate how much you need [\[click here\]](#).




**11 LB (5 KG)**

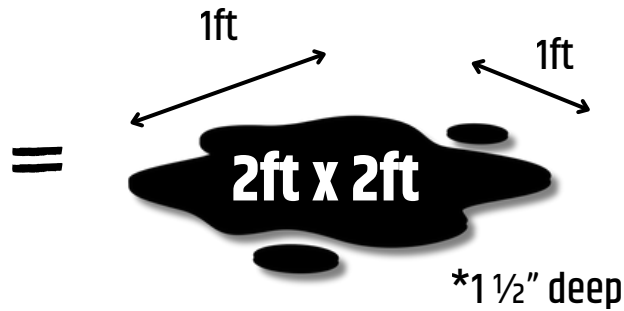

Apply 11 lbs for:  
**= 1ft<sup>2</sup>**



**44 LB (20 KG)**

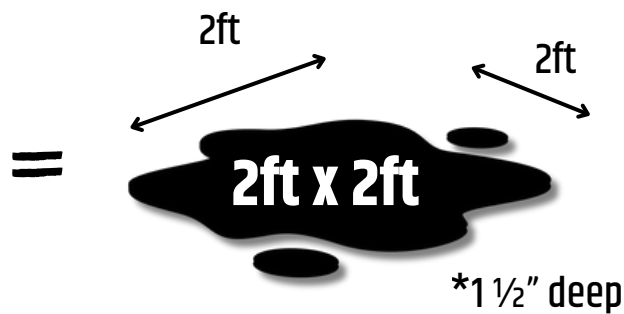

Apply 44 lbs for:  
**= 4ft<sup>2</sup>**



**MULTIPURPOSE CLEANER**  
COVERAGE

1 Gallon = 200-400 FT<sup>2</sup>



**ASPHALT CRACK FILLER**  
COVERAGE

1/4" BEAD = 24 LINEAR FEET